


1 Find Mounting Location

- No Metal obstructions
- Mount as high as possible with a direct view to the horizon.
- Ensure device is clear of any moving parts.

Mount device horizontally, flat side down, without any metal obstructions.

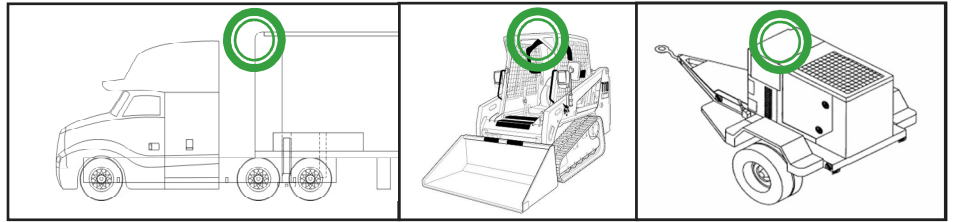


NOTE: The F-XB is weatherproof & shock resistant, and can be mounted outside of unit.

2 F-XB Device Connections

- The 3 wire install connections are mandatory. The device will not operate without these connections.
- The F-XB Yellow, Green and Brown wires are outputs. When connected using a relay, can drive optional features.
- The T2C Orange and Blue wires are inputs. When connected using a relay, can drive optional features.
- The Blue/White wire is the 1 Bit Bus Data Line ie. Temp Sensor
- The Pink Wire is the Analog Data Input ie. Liquid Level
- All connections must be soldered.

Basic Fleet Tracking/Optional Features

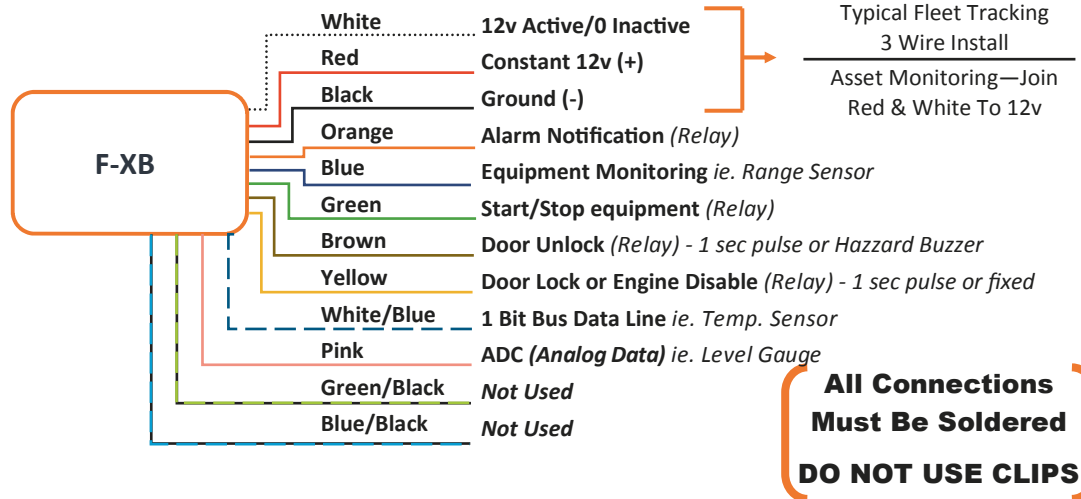

3 Check Signal

- Confirm green GPS lock & amber cellular network lights are solid
- Vehicle must be outdoors to activate GPS signal

Note: Cellular & GPS Lock may take up to several hours



4 Test

- Log In to your dealer account
- Enter the device ESN
- Test all installed features
- Assure red/green timer is displaying on “start” bar to confirm true ignition connection

+1 306.979.8900 | About Us | Media Buzz | Blog

CUSTOMER LOGIN

DEALER LOGIN

No Dealer Account?

Create one at www.Text2Car.com
Or, call the head office and have technical support test all installed features

5 Secure Device

- Secure the device to the chosen mounting location using mounting bolts.

TEXT2CAR.COM

306.979.8900

info@text2car.com



MEMBER



RECIPIENT