




INSTALLATION GUIDE

F-XB FLEET & ASSET TRACKING

1 Find Mounting Location

- No Metal obstructions
- Mount as high as possible with a direct view to the horizon.
- Ensure device is clear of any moving parts.

Mount device horizontally, flat side down, without any metal obstructions.

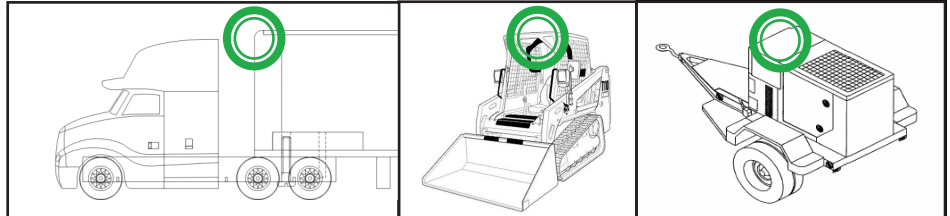


NOTE: The F-XB is weatherproof & shock resistant, and can be mounted outside of unit.

2 F-XB Device Connections

- The 3 wire install connections are mandatory; **Red, White, and Black**.
- The power input (red) must be connected to a constant +12/24 VDC supply; preferably, directly to the vehicle battery terminal.
- The ignition input (white) must be connected to the vehicle ignition or an appropriate key operated line, ensuring that power to the ignition wire is available ONLY when the vehicle ignition is on.
- The ground line (black) must be connected to chassis ground.
- The Yellow, Green and Brown wires are outputs. When connected using a relay, can drive optional features.
- The Orange and Blue wires are inputs. When connected using a relay, can drive optional features.

Basic Fleet Tracking/Optional Features

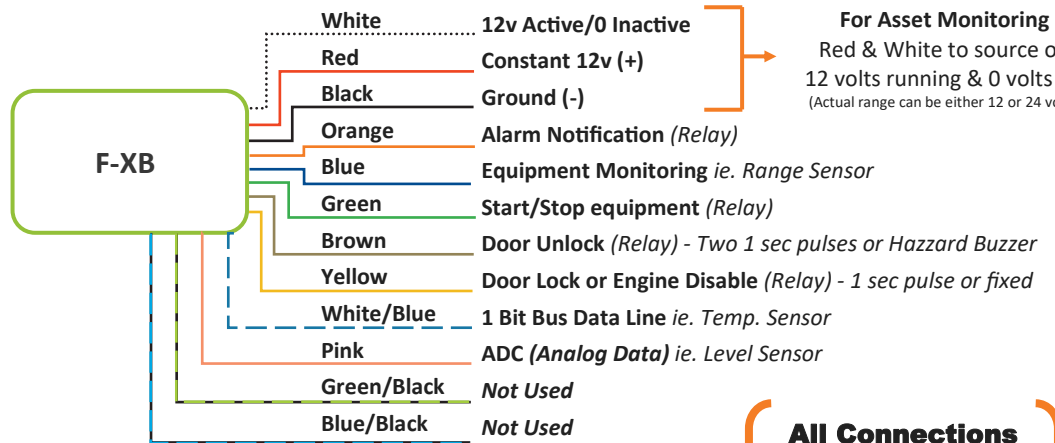

**All Connections
Must Be Soldered
DO NOT USE CLIPS**

3 Check Signal

- Confirm green GPS lock & amber cellular network lights are solid
- Vehicle must be outdoors to activate GPS signal



4 Test

- Log In to your account
- Select the installed device
- Test all installed features
- To insure proper white wire ignition connection, confirm the time is displayed on the green "Start" bar timer.

Note: Initial Cellular & GPS Lock may take up to several hours

5 Secure Device

- Secure the device to the chosen mounting location using mounting bolts.

Find this and other manuals



TEXT2CAR.COM
306.979.8900
info@text2car.com

+1 306.979.8900 | About Us | Media Buzz | Installers

NEW ACTIVATION

REFERRAL REWARDS

CUSTOMER LOGIN

DRIVER LOGIN