


1 Find Mounting Location


- No Metal obstructions
- Mount as high as possible with a direct view to the horizon.
- Ensure device is clear of any moving parts.

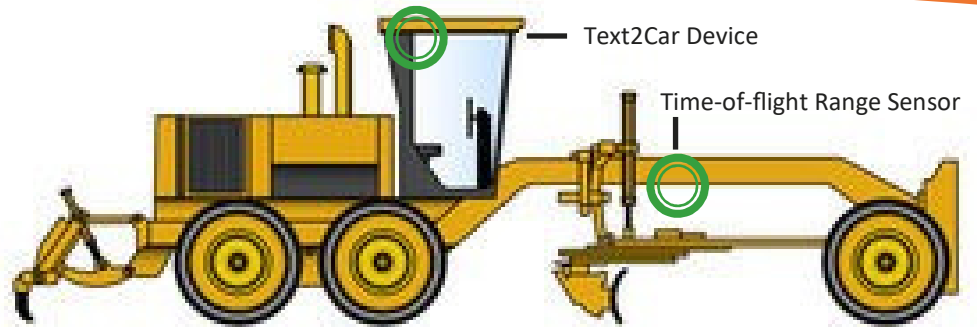

Mount device horizontally, flat side down, without any metal obstructions.

2 F-XB Device Connections

- 12 or 24 volt can be used, however voltage must be consistent throughout. If 24 volt is used on one connection it must be used for all other connections requiring voltage.
- Using the provided L-Bracket mount sensor above blade disk.
- Run Sensor cable along spine into the cab and connect to the 4-pin connector.

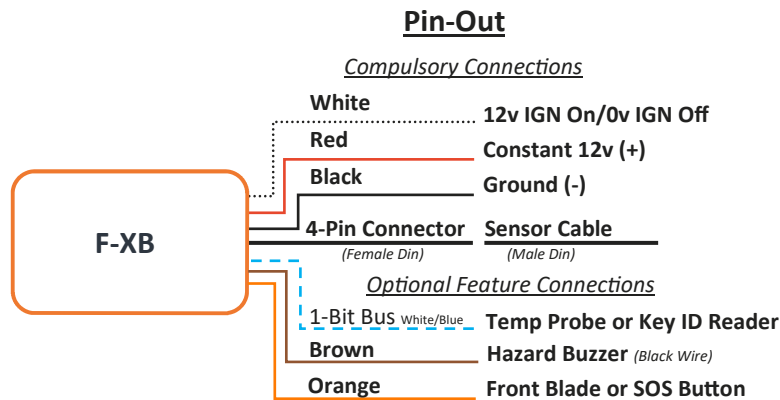

**All Connections Must Be Soldered
DO NOT USE CLIPS**

3 Mount Time-of-Flight Sensor & Adjust Blade Threshold

See back side of page for detailed instructions & optional feature connections

Turn Page Over



3 Check Signal

- Confirm green GPS lock & amber cellular network lights are solid
- Vehicle must be outdoors to activate GPS signal

Note: Cellular & GPS Lock may take up to several hours



4 Test Cycle

- Turn On Ignition
- Raise blade above the threshold
- Wait 30 Seconds
- Lower the blade
- Turn off Ignition
- Confirm all events were reported

5 Secure Device

- Secure the device to the chosen mounting location using mounting bolts.

Top-Right Corner of Text2Car.com

+1 306.979.8900 | About Us | Media Buzz | Blog

CUSTOMER LOGIN

DEALER LOGIN

TEXT2CAR.COM
306.979.8900
info@text2car.com

RMFM Accessory Installation Guide

Time-of-Flight Range Sensor




Mounting Location

As shown in this image, the time-of-flight range sensor should be mounted with the bracket provided. The time-of-flight range sensor should be aimed at a flat surface that changes elevation with the grader's blade. Additional mounting holes may need to be drilled in the provided bracket to accommodate mounting, using existing bolts on the grader's I-beam. Use wire ties to secure harness along grader spine.

Setting the Blade Height Threshold

Once installed, determine the threshold height. Start with the blade as high up as possible. Begin lowering the blade until considered "down" or "in use". Avoid "feathering" by raising the blade one or two inches. *(If you cannot determine the blade threshold, lower the blade 6 inches from max height.)*

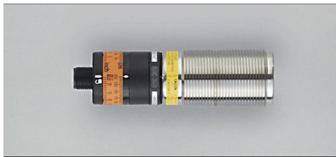

At this point adjust the sensor by rotating the top black dial to the "unlock" position. Starting from 0, rotate the lower orange dial until the amber light on the device turns on. Rotate the top black dial to the "lock" position.

Note: When the light is ON, the blade is UP. When the light is OFF, the blade is DOWN.

Regular cleaning of sensor lens and reflecting surface required for continued accuracy.

Optional Accessory Connections

In-Cab Hazard Buzzer



Wiring

Red – Constant 12v
Black – T2C Brown (output)

SOS Button



Wiring

Black – Ground
Yellow – F-XB Orange (input)
Purple – Not Used
White – Not Used

Temp Probe

Probe	Text2Car	Function
White	Blue/White	1-Bit Bus Data
Black + Blue	Black	Ground
Red	N/A	Floating



Key ID Reader

Probe	Text2Car	Function
Grey	Blue/White	1-Bit Bus Data
Black	Black	Ground

